

P.E.D. SAFE-PAK USER INSTRUCTIONS



1.

1. Remove Thermal-Guard Gloves & Install



2.

2. Open Upper Leather Flap & Upper Zipper



3.

3. Insert Device & Close Zipper.



4.

4. Close Upper Flap



5.

5. Secure Side Straps with Lock Snaps.

PED SAFE-PAK



AVIATION SERIES
FIRE CONTAINMENT CONCEPTS




WARNING FAILURE TO FOLLOW THE WARNINGS COULD CREATE A RISK OF SERIOUS INJURY.

- *SEVERE BURNS OR DEATH** –Ensure the provided fire resistant gloves are correctly installed and any other optional personal safety equipment prior to deploying the PED SAFE-PAK
- *NOTE:** Never attempt to pick up any item which is fully engulfed in flames. Fully extinguish all fires in accordance with your company's recommended procedures prior to inserting in the PED SAFE-PAK
- *SMOKE INHALATION** –Ensure the PED SAFE-PAK upper flap is correctly closed and sealed to contain the maximum amount of smoke from escaping the system.

NOTICE

- * PROCEDURES-** Strictly adhere to your aircraft specific operating procedures for on-board fires.
- *PROJECTILE-** To reduce the possibility of the PED SAFE-PAK becoming a projectile, the system must be secured during taxi, takeoff, turbulence and landings.
- *SKIN IRRITANT-** The PED SAFE-PAK utilizes multiple layers of high temperature synthetic materials and may be irritating to the skin with excessive exposure.

For additional safety instructions please visit www.fcconcepts.com

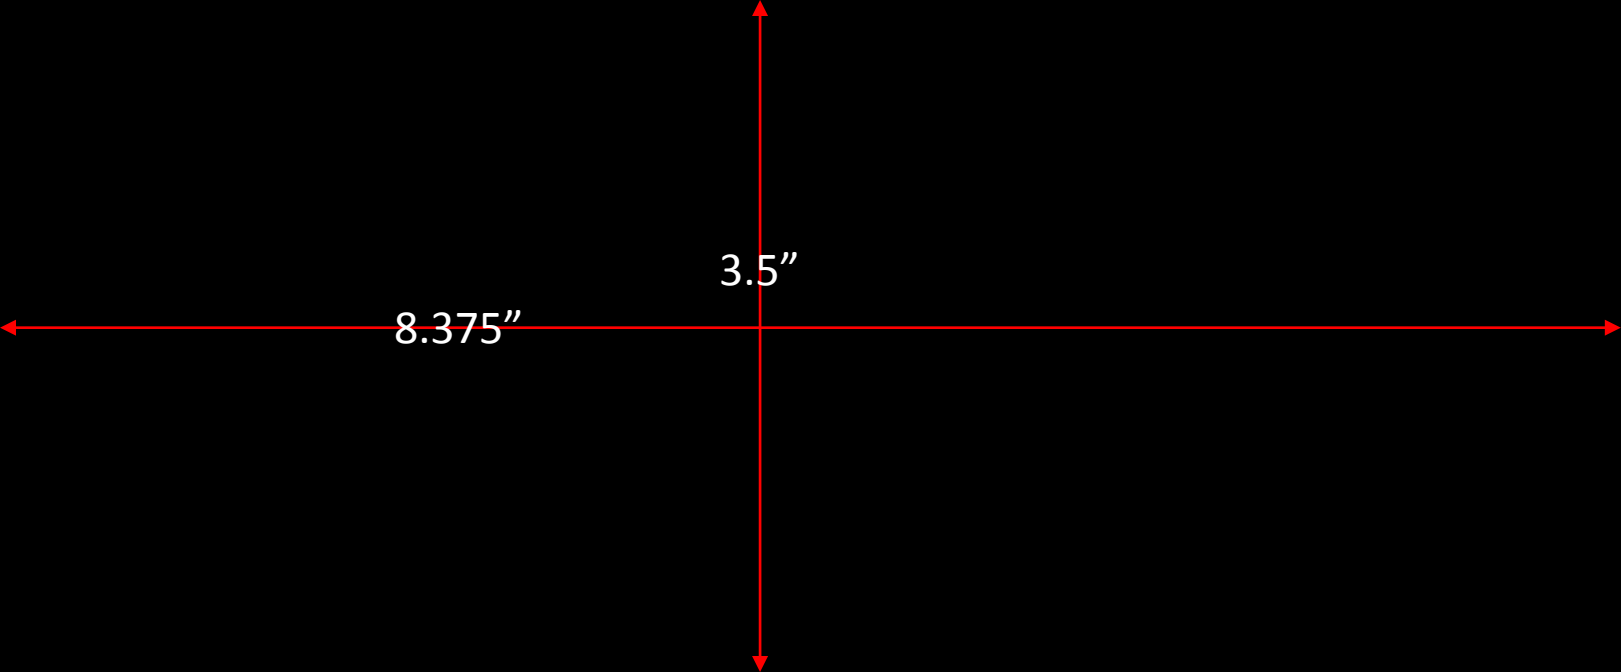

8.375''

3.5''